

Kurzanleitung E43-U/I



Anschlussdaten

Versorgungsspannung: 12 -24V AC/DC

Relaisausgang: max. 50V


Einlernen des Handsendercodes am Empfangsgerät

Taste am Empfänger **(1)** so oft drücken, bis gewünschte Betriebsart eingestellt ist. Die Betriebsart wird mit der LED **(2)** angezeigt. Anschließend den Handsender Betätigen.

Beispiel für Betriebsart Flip-Flop: Die LED **(2)** blinkt zwei Mal hintereinander. Anschließend kommt eine Pause. Danach blinkt die LED **(2)** erneut.

Löschen der Handsendercodes am Empfangsgerät

Empfängertaste **(1)** einmal drücken bis LED **(2)** anfängt zu blinken. Empfängertaste **(1)** anschließend für ca. 10 Sekunden gedrückt halten bis LED **(2)** schnell blinkt.

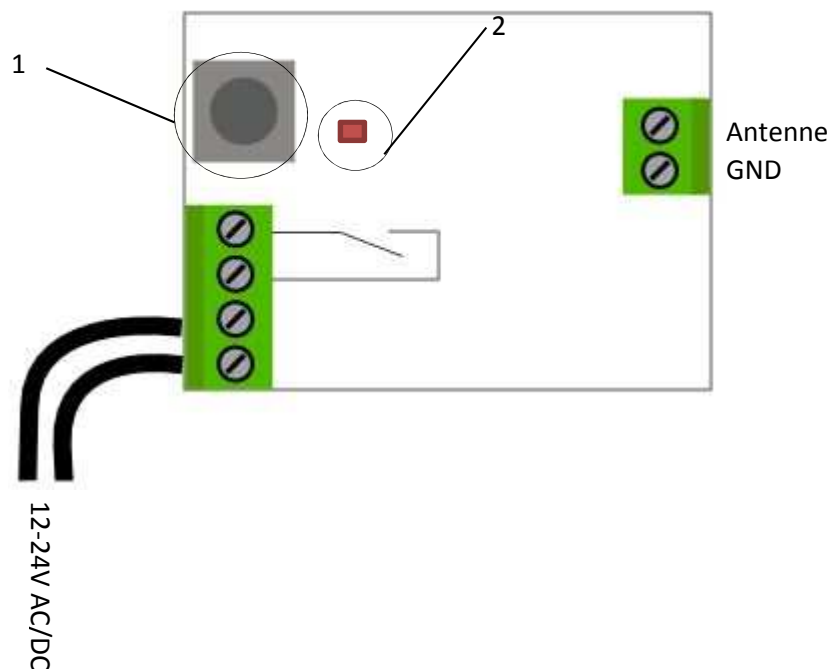

Menü Nr.	Betriebsart	Info
1	Totmann	Relais schaltet solange der Sender betätigt ist.
2	Flip-Flop	Relais wechselt den Status
3	OFF	Relais schaltet ab
4	ON	Relais schaltet

Brief instruction E43-U/I



Connection data

Voltage supply: 12 -24V AC/DC

Relay output: max. 50V


Programming the transmitter

Press the button of the receiver **(1)** as often as the required operating mode is set. The operating mode is shown by the LED **(2)**. As confirmation, press the button of the transmitter afterwards.

Example operating mode Flip-Flop: the LED **(2)** flashes twice and pauses afterwards. Then, the LED **(2)** flashes again.

Deleting the transmitter programmed

Press the button of the receiver once **(1)**. The LED **(2)** starts flashing. Afterwards, press and keep pressed for approx. 10 seconds the button of the receiver **(1)**. The LED **(2)** starts flashing quickly.

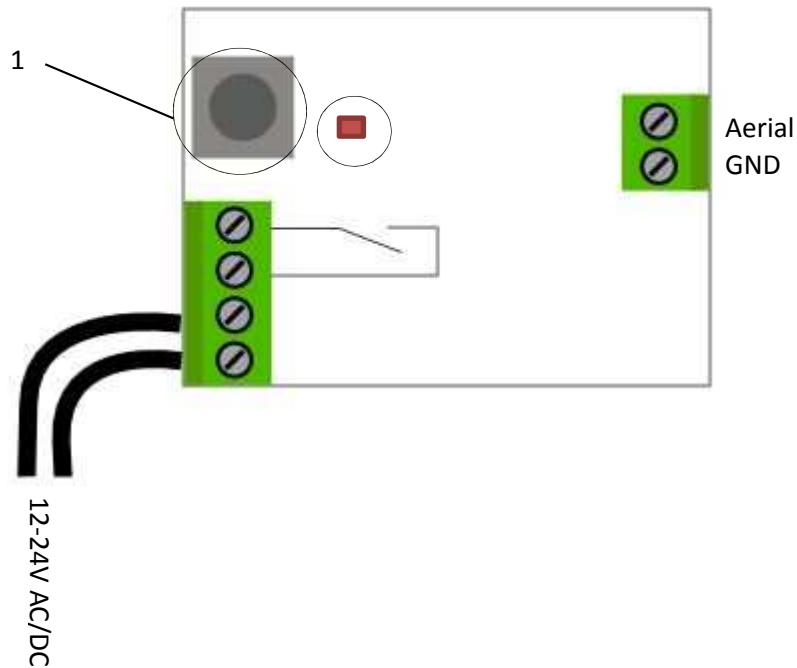

Menu No.	Operating mode	Information
1	Dead man	The relay is switching as long as the transmitter is generated.
2	Flip-Flop	The relay is changing the state.
3	OFF	The relay is switching off.
4	ON	The relay is switching.